

# **NetBox**

# for XL2 Sound Level Meter



NetBox with 3G Modem for unattended noise monitoring with the XL2 Sound Level Meter

The NetBox connects the XL2 Sound Level Meter to the internet for unattended noise monitoring. It transfers the measurement data to the fully-managed NoiseScout Web Portal in real time or provides a secure access to the instrument via the NTi Audio Gateway.

The NoiseScout solution brings your XL2 noise measurement data to your web browser. The NetBox retrieves the noise levels from the XL2 and forwards them via 3G or LAN to the NoiseScout servers. All measurement levels are available online for live visualization and unattended monitoring with email alerts.

Alternatively the NetBox enables SFTP (Secure File Transfer Protocol) and remote COM port access to the XL2. The setup is plug-and-play. The recording of spectral data, 100 ms data logging, and event audio can be set up on the XL2. The resulting log files can then be retrieved remotely during a running measurement.



Live Noise Monitoring on the NoiseScout Web Portal with XL2 Sound Level Meter and NetBox

## **Key Features**

- Secure 24/7 noise monitoring
- 3G and LAN communication
- NoiseScout provides automatic email alerts
- Remote noise data collection (SFTP)
- Plug-and-play solution

#### **Applications**

- Base-line surveys for planning
- Construction site monitoring
- Road traffic noise monitoring
- Entertainment venue management
- Neighborhood noise pollution measurements
- Environmental & Community Noise Surveys





NoiseScout offers automated email alerts when noise limits are exceeded

# **Specifications**

Online Communication	<ul> <li>NetBox</li> <li>LAN</li> <li>NetBox with 3G Modem</li> <li>LAN</li> <li>3G (SIM card slot provided)</li> </ul>	
Additional Interfaces	<ul> <li>4 x USB port</li> <li>Auxiliary inputs/outputs (prepared for future use)</li> <li>SD Card slot for service</li> </ul>	
Connections to XL2	USB interface     Power supply (top-head rail connector)	
Data Day Credits	<ul> <li>Required for the online data transmission</li> <li>Includes 10 Data Day Credits</li> <li>Data Day Credits apply to a single user account.</li> <li>Credits may be shared among multiple XL2s.</li> </ul>	
NoiseScout	Transfers measurement data and limit alerts from XL2 to NoiseScout server  Pay-per-use: One Data Day Credit is debited for each calendar day contained within the data  Mobile Data Volume Expected Usage < 3 GB / month	
Internet FTP Access	Remote access to all measurement data Full remote control of XL2 Sound Level Meter Pay-per-use: One Data Day Credit is debited for each calendar day on which data was download.	
Monitoring Features	<ul><li>NetBox supply voltage</li><li>Communication signal strength and type</li><li>Ambient temperature</li></ul>	
LED Indications	Power: power supply active     XL2: connected with XL2     Server: connected with NoiseScout server     Data: data transmitting in process	
Power Supply	<ul> <li>7.5 -16 VDC</li> <li>Power consumption</li> <li>NetBox typical 3 Watt</li> <li>XL2+NetBox typical 6 Watt</li> </ul>	
Temperature range	-10 °C to +50 °C (14 °F to 122 °F)	
Humidity range	5 % to 90 % RH, non-condensing	
Dimensions L x W x H	138 x 138 x 30 mm (5.4" x 5.4" x 1.2")	
Weight	290 g (10.2 oz.)	
Scope of Supply with Netbox	<ul> <li>10 Data Day Credits</li> <li>Mains power adapter 12 V, 2.0 A, 100-240 V</li> <li>Power cable to XL2</li> <li>Optional: integrated 3G Modem with external antenna (SMA connector)</li> </ul>	
Order Information	<ul> <li>NetBox (LAN)</li> <li>NetBox with 3G Modem</li> <li>Data Credits</li> <li>30 Days</li> <li>100 Days</li> <li>366 Days (1 year)</li> <li>1096 Days (3 years)</li> </ul>	600 000 450 600 000 458 600 000 490 600 000 491 600 000 492 600 000 493

All information subject to change without notice.



### **Setup and Power Supply Configurations**

This part describes the recommended setup and power supply configurations of the NoiseScout measurement station for short-term and long-term noise monitoring applications.




The internal XL2 battery can't be continiously charged by an external power supply for long-term applications. Therefore either replace the internal XL2 battery in annual intervals or operate the measurement station without the internal XL2 battery.

The manufacturer guidelines of the solar controller has to be followed. High electrical currents may be applicable. Select connection the cable type accordingly.

#### **Mains Power**

- Situation
  - mains power available
  - no back up for mains power interruptions
- Solution
  - default mains adapter (12V) supplies NetBox
  - power supply is looped through the NetBox to the XL2 Sound Level Meter
- What happens upon Mains Power Loss
  - noise measurement is stopped (in case of used inernal XL2 battery after 4 hours); XL2 powers down
  - all measurement data recorded prior the power outage is saved on the meter
  - NetBox is powered off; no remote monitoring or data communication is possible
- NoiseScout Managed Modus
  - customer can be automaticaly informed by email about the power loss for immediate action

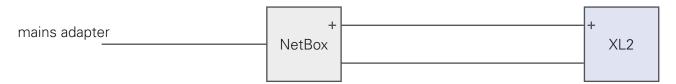


Configuration 1: Mains Power



#### **Battery Power Supply**

- Situation
  - mains power only optional available

- external battery pack(s) power the noise monitor station
- Solution
  - external battery pack(s) power the NetBox optional are the battery packs connected to an individual charger
  - power supply is looped through the NetBox to the XL2 Sound Level Meter
- What happens upon Battery Pack is down
  - noise measurement is stopped (in case of used inernal XL2 battery after 4 hours); XL2 powers down
  - all measurement data recorded prior the power outage is saved on the meter
  - NetBox is powered off; no remote monitoring or data communication is possible
- NoiseScout Managed Modus
  - customer can be automaticaly informed by email about the power loss for immediate action

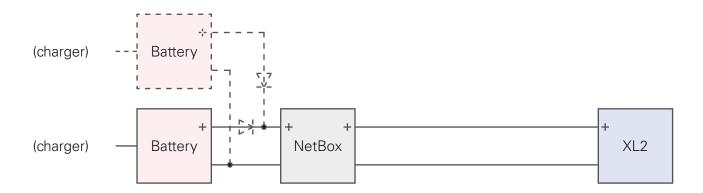


Configuration 2: Battery Power Supply



### **Mains Power Supply with Battery Backup**

- Situation
  - mains power available
- external battery pack(s) serve as back up
- Solution
  - default mains adapter (12V) supplies NetBox
  - power supply is looped through the NetBox to the XL2 Sound Level Meter
  - external battery packs are connected for back up in case of mains power drops out (a charger is connected as applicable)
- What happens upon Mains Power Loss
  - external battery pack(s) power XL2 Sound Level Meter
  - noise measurement is continued as long as XL2 is powered by the external and internal battery
  - all measurement data is saved on the XL2; no data is lost
  - NetBox is powered off; no remote monitoring or data communication is possible
- NoiseScout Managed Modus
  - customer can be automaticaly informed about mains power loss by email
  - the measurement data of the last 7 days is available on the meter power up the NetBox again within latest 6 days to ensure continious measurement data

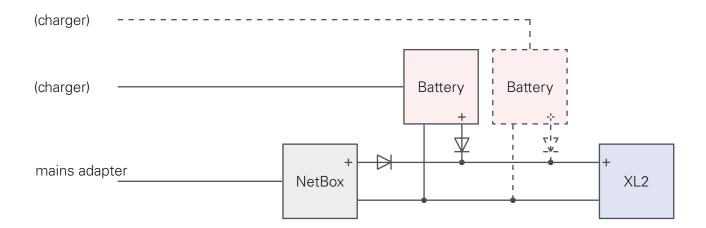


Configuration 3: Mains Power Supply with Battery Backup



#### **Solar Power**

- Situation
  - no mains power available
  - solar panel powers the noise monitor station
- Solution
  - external battery pack supplies NetBox

- power supply is looped through the NetBox to the XL2 Sound Level Meter
- solar controller charges battery pack from the solar panel
- What happens upon Battery Pack is down
  - noise measurement is stopped (in case of used inernal XL2 battery after 4 hours); XL2 powers down
  - all measurement data recorded prior the power outage is saved on the meter
  - NetBox is powered off; no remote monitoring or data communication is possible
- NoiseScout Managed Modus
  - customer can be automaticaly informed by email about the test station power loss for immediate action

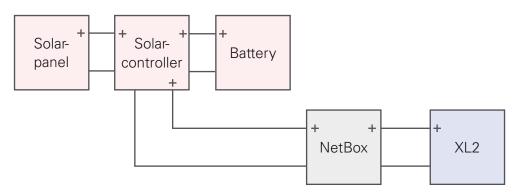

Configuration 4: Solar Power



## Mains Power Supply with Solar Backup of Test Station


# Situation

- mains power available
- solar panel serves as backup power for the noise monitor station

#### Solution

- default mains adapter (12V) supplies NetBox
- power supply is looped through the NetBox to the XL2 Sound Level Meter
- solar controller is connected for back up in case of mains power drops out and charges battery from the solar panel
- What happens upon Mains Power Loss

- battery pack powers NetBox and XL2 Sound Level Meter
- noise measurement is continued as long as XL2 is powered by the external and internal battery
- all measurement data is saved on the XL2; no data is lost
- NetBox is powered on; remote monitoring or data communication is possible
- NoiseScout Managed Modus
  - customer can be automaticaly informed by email about the test station power loss for immediate action

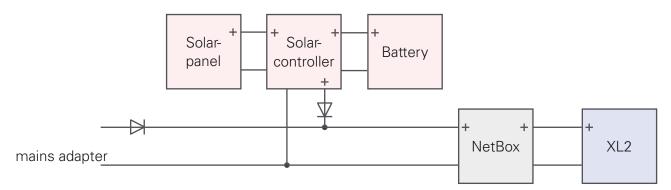

Configuration 5: Mains Power Supply with Solar Backup of Test Station




# Mains Power Supply with Solar Backup of XL2

#### Situation

- mains power available
- solar panel serves as backup power for the noise monitor station

#### Solution

- default mains adapter (12V) supplies NetBox
- power supply is looped through the NetBox to the XL2 Sound Level Meter
- solar controller is connected for back up in case of mains power drops out and charges battery from the solar panel
- What happens upon Mains Power Loss
  - battery pack powers XL2 Sound Level Meter
  - noise measurement is continued as long as XL2 is powered by the external and internal battery
  - all measurement data is saved on the XL2; no data is lost
  - NetBox is powered off; no remote monitoring or data communication is possible
- NoiseScout Managed Modus
  - customer can be automaticaly informed by email about the mains power loss for immediate action; the XL2 continiues the measurement

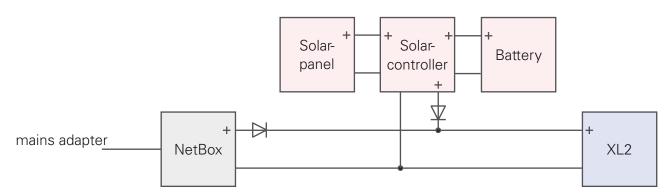

Configuration 6: Mains Power Supply with Solar Backup of XL2